



Application Note AN M82 Quantification of oil in waste water on off-shore oil platforms

Introduction

During the oil production process on off-shore platforms large amounts of waste water are accumulated. In order to assure an environmentally safe waste dump the quality of the waste water is regulated by law. Therefore special parameters like the total hydrocarbon content have to be determined. The current standard measurement technique is based on the gas-chromatography (GC)-analysis of a pentane extract of the waste water. Due to the fact that pentane is highly flammable and forms explosive gas-air mixtures, it's not advisable to be used on oil platforms. Hence the waste water sample needs to be transferred to a mainland lab by helicopter. Obviously this form of water analysis is very costly and time consuming.

As an alternative to this GC-based measurement procedure, FT-IR based methods have already been established and used. Their mayor drawback is the need of C-H free extraction solvents like carbon tetrachloride (CCl₄) or tetrachloroethylene (C_2Cl_4).

In contrast the ALPHA based method is a very effective approach for the fast screening of waste water samples, however it does not replace the OSPAR GC-based method when official results are required. It uses a simple extraction method with a small amount of the less harmful solvent chloroform. Since the chloroform extraction is not prone to emulsification as is the case with pentane, there is no need to add salt or to centrifuge the extract. With the exception of a filtration using a disposable syringe filter, there is actually no need for a further treatment of the extract. Subsequent to this easy step, the extract can be measured directly at the oil platform with an ALPHA spectrometer in combination with a liquid flow through cell. Compared to the GC-analysis it's not necessary to transport the sample to a mainland lab and therefore the measurement procedure is very fast and cheap. The complete test including sample preparation, measurement and analysis takes less than 10 minutes. When using the intuitive and easy to use OPUS-LAB software even an untrained person is able to get reliable results immediately.

Instrumentation

The very compact and robust ALPHA FT-IR spectrometer has proven to be very suitable for routine applications. The samples are measured by means of a special designed liquid flow through cell. With the aid of multivariate "Quant 2" calibrations it is possible to measure hydrocarbons in chloroform despite the fact that chloroform itself has C-H absorbances. This approach allows a very accurate determination of the hydrocarbon content with a typical error of prediction in the range of 2- 3 ppm. As an additional beneefit the OPUS-LAB based user interface provides a very intuitive and comfortable way to perform the IR analysis procedure.



Figure 1: ALPHA spectrometer with flow through cell.

The ALPHA FT-IR spectrometer produces reliable data. A permanent online diagnostics of the spectrometer by the PerformanceGuard[™] provides a "real time" display of the instrument status. Instrument validation (OQ/PQ) is performed by fully automated test routines to ensure permanent instrument operation within specification. The OPUS software is fully compliant to cGMP and 21 CFR part 11 when operated in a validated environment.

Example application

The procedure to determine the content of hydrocarbons in a waste water sample comprises essentially two steps: Sample extraction and measurement of the resulting extract with the ALPHA FT-IR spectrometer. Evaluation and documentation of the results is done automatically by means of the OPUS-LAB software. The uncomplicated procedure to analyze the waste water is as follows:

- At the sampling point make sure to let the water flow for one minute before you take the sample, then take a water sample of one liter waste water.
- Add 50 ml of chloroform to the water sample and shake for 5 minutes.
- Separate the organic chloroform phase by using a separation funnel.
- Flush the organic phase through a disposable syringe filter into the flow through cell.

The measurement itself is extremely easy:



Figure 2: OPUS-LAB user interface

- Click on "Measurements", then on "Start".
- When the sample is filled into the flow through cell simply press "Measure", the measurement will take about 20 seconds. When done, the report is automatically generated as a PDF and can be printed:

Report of Analysis								
Spectrometer: ALPHA (Serial number 1 01282) OPUS version: 6.5 Build: 6, 5, 97 (20090227) Operator: Default								
Experiment filename: TRANS.xpm Method filename: hydrocarbons.q2 - 2010/12/22 Spectrum filename: C:\Program Files\OPUS_65		4.0 (01/05/11 14:01:35)						
Product Group	Hydrocarbons in water							
Product	Hydrocarbons in water							
Location	nrh							
(]					
Quant evaluation OK! (no outliers de	tected)							
Quant results								
Name	Value	Range	Add. Info					
Hydro Carbons	10 ppm	[-inf.;30]	MDI = 0.4					

Figure 3: Automatically generated report

Once a day a background measurement against air is required.

Details on the measurement evaluation

Figure 4 shows various samples with different amounts of petroleum hydrocarbons in chloroform. All spectra contain similar spectral features that originate from the chloroform spectrum. The differences due to the varying content of petroleum hydrocarbons are noticeable in the region below 3000 cm⁻¹ where the vibrations of aliphatic C-H bonds are located. The region between 3000 and 2820 cm⁻¹ is therefore used for the multivariate calibration. The enlarged version of this region can be seen in figure 5. Figure 6 shows the ppm values of reference samples


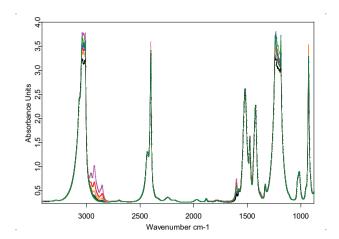


Figure 4: Spectra of chloroform extracts with a hydrocarbon content between 0 and 100 ppm.

predicted by the calibration model. These values are plotted against the true hydrocarbon content measured with the GC-method. The chart is the result of an internal cross validation where one spectrum is taken out of the calibration spectra set and its value is predicted by a model created out of the residual calibration spectra. This is done for each single spectrum out of the calibration spectra set. The predicted values are marked as green spots and the true value is indicated by the straight green line. The deviations of the predicted values are very small; consequently the RMSECV (Root Mean Square Error of Cross Validation) is very low with a value of 1.98 ppm and the coefficient of correlation reaches 99.59 %.

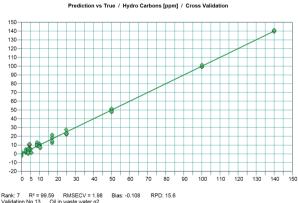

Validation No 13 Oil in waste water.q2

Figure 6: Result of the cross validation. Predicted ppm values compared to the true ones.

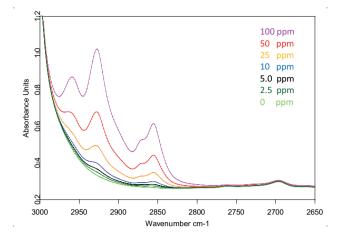


Figure 5: Zoom of the calibration region of the Quant 2 method

As a further test the model was used to predict seven external samples. The results of this test are listed in table 1. True and predicted values are in good agreement with each other; the deviation of the measurement values is in all cases less than 3 ppm. This error includes systematic and random errors resulting from sampling, the references and user differences.

	File Name	Method	Component	True	Prediction	Unit
1	Sample1 .0	Oil in waste water.q2	Hydro Carbons	3.8	2	ppm
2	Sample2 .0	Oil in waste water.q2	Hydro Carbons	5.6	3	ppm
3	Sample3 .0	Oil in waste water.q2	Hydro Carbons	10.5	9	ppm
4	Sample4 .0	Oil in waste water.q2	Hydro Carbons	17.1	16	ppm
5	Sample5 .0	Oil in waste water.q2	Hydro Carbons	24.8	27	ppm
6	Sample6 .0	Oil in waste water.q2	Hydro Carbons	50	50	ppm
7	Sample7 .0	Oil in waste water.q2	Hydro Carbons	100	101	ppm

Table 1: The hydrocarbon values of various samples as predicted by the Quant 2 model compared to the true values.

Summary

By using the ALPHA spectrometer system with a specially designed flow through cell a fast and accurate analysis of the hydrocarbon content in waste water is possible directly on oil platforms.

Due to a robust instrumental setup, simple sample preparation and a user friendly measurement procedure the analysis can even be performed by untrained users. The complete test takes less than 10 minutes and therefore is very appropriate to be used as a monitoring method for large sample numbers.

Bruker Optik GmbH

Ettlingen · Deutschland Phone +49 (7243) 504-2000 Fax +49 (7243) 504-2050 info.bopt.de@bruker.com

www.bruker.com/optics

Bruker Optics Inc.

Billerica, MA · USA Phone +1 (978) 439-9899 Fax +1 (978) 663-9177 info.bopt.us@bruker.com

Bruker Shanghai Ltd.

Shanghai · China Phone +86 21 51720-890 Fax +86 21 51720-899 info.bopt.cn@bruker.com

Bruker Optics is continually improving its products and reserves the right to change specifications without notice. © 2013 Bruker Optics BOPT-4000720-01